Quick Start ||| CLUB-3800

Quick Reference Setup Guide

This quick reference guide is provided to help you set up your **CLUB-3800** system for the first time. It contains instructions on setting up the products that are included in the **CLUB-3800**. If you are connecting any additional gear that is not included in the **CLUB-3800**, refer to the appropriate manuals for detailed instructions.

Gathering Package Contents

The first step to putting together your new **CLUB-3800** system is unpacking all of the necessary equipment. Remember to keep your manuals nearby when setting up, as you may need to reference them. The products listed below are included in the **CLUB-3800** system:

CDG-9000 PRO CD/CDG Player

[1] Instruction Manual

DA-2200 PRO Digital Karaoke Mixer • [1] Instruction Manual

VP-300 PRO 300W Professional Power Amplifier • [1] Instruction Manual

VX-15 Vocal Speakers

• [2] VX-15 speakers

Mounting components into the RC-8

Follow these basic guidelines when mounting:

• Always screw in the mounting screws using an "X" formation.

• If possible, to keep the products cooler, leave some space in between the components in the rack.



SS-88 Speaker Stands


• [2] SS-88 speaker stands

RC-8 Road Case

- [1] RC-8 road case
- [1] Rolling cart
- [2] MARK-38 microphones
- [1] Gooseneck DJ light
- [1] Double RCA to 1/4" cable
- [2] MDP to 1/4" cable
- Rack-mounting screws

Below is one way to configure your CLUB-3800:

Ø

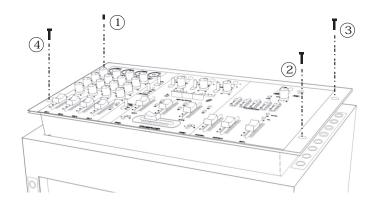



On the web at **www.vocopro.com** or call toll free **1-800-678-5348**

CDG-9000 PRO CONTROLLER CDG-9000 PRO PLAYER DA-2200 PRO MIXER VP-300 PRO AMPLIFIER



Setting up the speakers and speaker stands

1. Setup each SS-88 speaker stand by extending the support legs to a position that is stable and tighten the tension mechanism firmly.

2. Place a VX-15 speaker on top of the SS-88 so that the shaft of the SS-88 fits flush into the mounting cavity on the bottom of the VX-15.

NOTE: Each end of the SS-88 pole has a particular diameter fitted for common speakers' mounting cavities. If the SS-88 shaft does NOT fit flush into the mounting cavity on the VX-15, loosen the SS-88 pole and reverse it in the stand and then remount the speaker.

3. Repeat the above steps for each speaker and stand.

Connecting Power

Be sure that each product has a power cord firmly attached. It is recommended that you use a power strip/surge protector when connecting your CLUB-3800 to a power outlet.

Connecting the components

Once you have mounted all of the components into the RC-8, it is time to connect them. Follow these directions on connecting the components.


NOTE: If you are also connecting components that are not part of the CLUB-3800 system, please refer to the manual of that product for setup instructions.

> MAKE SURE THAT ALL PRODUCTS' POWER IS TURNED OFF BEFORE CONNECTING ANYTHING

CDG-9000 PRO remote unit to the player unit

Connect the Control Interface Connector from "CONNECT TO MAIN UNIT" jack on the rear panel of the remote unit to the "CONNECT TO REMOTE CONTROLLER" jack on the rear panel of the player unit.

CDG-9000 PR0 Controller	• • •	
CDG-9000 PRO Player]

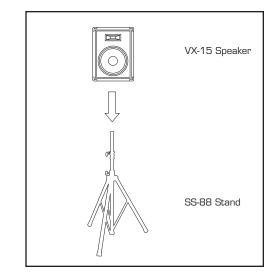


2 CDG-9000 PRO player unit to DA-2200 PRO

You have the option of either connecting each deck of the CDG-9000 PRO separately (Fig. 1) or together through a single SWITCHED output (Fig. 2).

Separately through individual deck outputs (Fig.1)


Using RCA cables:

1. For each deck, connect the L/R (red & white) audio outputs and Video (yellow) output on the CDG-9000 PRO to the CDG and DVD inputs on the rear panel of the DA-2200 PRO

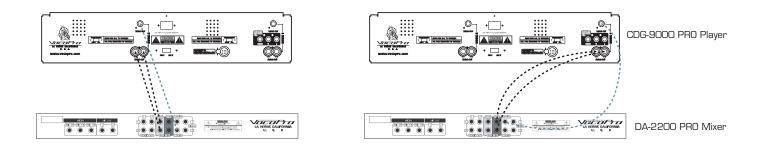

Together through SWITCHED output (Fig. 2)


Using RCA cables: 1.Connect the L/R SWITCHED audio and SWITCHED video outputs on the CDG-9000 PRO player to the CDG audio and video inputs on the DA-2200 PRO

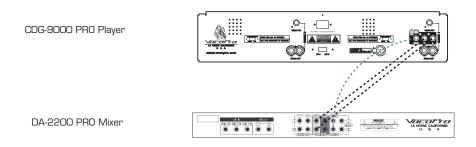

3 DA-2200 PRO to VP-300 PRO

Using the double RCA(m) to double $\frac{1}{4}$ "(m) cable :

- 1. Connect the L/R RCA ends to the L and R Audio Out jacks on the DA-2200 PRO.
- 2. Connect the two 1/4"(m) ends to the 1/4" INPUT CH. A and INPUT CH. B jacks.

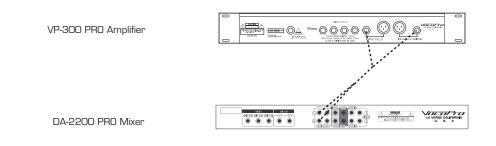

4 VP-300 PRO to VX-15 speakers


Using the 9' MDP to $\frac{1}{4}$ " speaker cables:

5

1. Connect the MDP end to the red and black CH. A speaker output on the rear panel of the VP-300 PRO.

2. Connect the 1/4"(m) end the input on the back of the VX-15 speaker.


3. Repeat this step for the second speaker, but now going out of the CH. B speaker output on the rear panel of the VP-300 PRO.

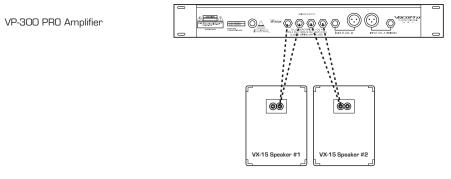

MARK-38 Microphones to the DA-2200 PRO

Using either a mic cable with two XLR ends (Fig. A) or an XLR to 1/4" cable (Fig. B):

Connect microphones to the 1/4" MIC input jacks on the front panel of the DA-2200 PRO.

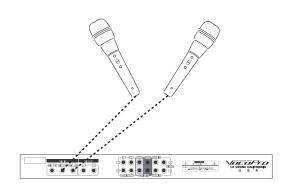

DA-2200 PRO Mixer